



Automatic Low Temperature Dry Block Calibrator (CALsys -15/110 Autocal) User's Guide



TEMPSENS INSTRUMENTS (I) PVT. LTD. UNIT II

A-190, Road No.5, M.I.A., Udaipur-313003 INDIA

Ph. : +91-294-3500600,

Fax : +91-294-3500631

Email : tech@tempsens.com

Web : www.tempsens.com

Legal Disclaimer

The information contained in this document is the property of TEMPSENS.

TEMPSENS reserves the right to make changes to this document and to the product described herein without notice. Before installing and using the product, review the latest version of the applicable documentation, which are available from the Tempsens website at:

<http://www.tempsens.com/>

© 2021 Tempsens Instrument Pvt. Ltd. All Rights Reserved.

Document Information

Name	Automatic Low Temperature Calibrator (CALsys -15/110 Autocal) User Manual
Document Version	1.0
Document Code	TS.CS.001
Publish Date	Monday, April 11, 2022

Table of Contents

Preface.....	5
Safety Information.....	5
Electrical Safety.....	6
Health and Safety Instructions.....	7
Cautions and Preventions.....	8
Document Conventions.....	8
 Chapter 1	
Introduction.....	9
1.1 About CALsys -15/110 Autocal.....	9
1.2 Basic Working Model of CALsys -15/110 Autocal.....	10
1.3 Physical Measurements.....	11
1.4 Technical Specifications.....	12
 Chapter 2	
Setting Up CALsys -15/110 Autocal.....	13
2.1 Installation.....	13
2.2 Optimal Environmental Conditions.....	13
2.3 Unpacking and Initial Inspection.....	14
2.4 Operating Instructions.....	15
2.5 Initial Testing.....	15
 Chapter 3	
Operating CALsys -15/110 Autocal.....	16
3.1 Turning on the Unit.....	16
3.2 Heating up the source	17
3.3 Operating Instructions.....	18
3.4 Cooling down the source.....	19

Chapter 4

Operating of HMI.....	20
4.1 CALsys -15/110 Autocal.....	20
4.2 In Manual Mode.....	20
4.3 In Auto Mode.....	20
4.4 User interface of CALsys -15/110 Autocal	21

Chapter 5

Digital Communication.....	25
-----------------------------------	-----------

Chapter 6

Software Installation.....	26
6.1 Installation.....	28

Chapter 7

Service & Maintenance.....	30
7.1 Routine Service.....	30
7.2 Replace the Controlling Sensor.....	30
7.3 Replace Solid State Relay.....	30

Chapter 8

Troubleshooting CALsys -15/110 Autocal.....	31
8.1 CALsys -15/110 Autocal unit does not turn on.....	31
8.2 CALsys -15/110 Autocal unit is not stable.....	31
8.3 The temperature of the calibrator does not rise.....	31

Appendix A : Calibration Services	32
In House Calibration Facility.....	32
On-site Calibration Facility.....	33
Fixed-Point Calibration Facility.....	33

Appendix B : Warranty 34

 Limit of Liability..... 34

 Caution in Using the Product..... 34

Preface

Welcome to the Automatic Low Temperature Dry Block Calibrator (CALsys -15/110 Autocal) user guide. This guide provides detailed information about all the product options and features, and explains how to use the product and configure basic settings to suit your requirements.

This user manual contains information about the product and its proper use and should be kept in a place where it will be easy to access. This user manual also provides safety precautions in using this product.

Safety Information

This topic contains important information regarding safety. Ignoring safety precautions may cause serious personal injury or damage to the unit and/or its components. Use the equipment only as specified in this manual. Otherwise, the protection provided by the instrument may be impaired.





Refer to the safety information in the Electrical Safety and Health and safety instructions sections or wherever specified in this manual.

In order to assure the device operates safely, the operator needs to act effectively and be conscious of safety problems.

The following definitions apply to the terms **“Warning”** and **“Caution”**.

- **“Warning”** identifies conditions and actions that may pose hazards to the user.
- **“Caution”** identifies conditions and actions that may damage the instrument being used.

The following safety symbols may appear on CALsys -15/110 Autocal unit:

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Risk of Danger. Important information. See Manual		Hazardous voltage. Risk of electric shock
	Caution, Hot Surface		Protective Earth Ground

Electrical Safety

WARNING:

- **This equipment must be correctly grounded before use. Make sure the ground conductor wire (colored green/yellow) in the main power cable is connected to a protective earth/ground. If the equipment is not properly grounded, the high voltage may flow through the equipment body (chassis). SEVERE INJURY OR DEATH may result if personnel fail to observe safety precautions.**
 - **Do not remove the panels from the equipment without proper safety measures to avoid internal main power supply voltage hazard.**
-

To avoid possible electric shock or personal injury, follow these guidelines.

- ⊕ This equipment uses protective earth circuit to ensure that the conductive parts do not store electric charges or conduct electricity if insulation fails.
- Before connecting the equipment to the electricity supply, understand the parts of the calibrator with the help of operating manual.
- Use power cables only with appropriate voltage and power rating, and that are approved for usage in your country.
- Replace the main power cable if the insulation is damaged, or if the insulation shows signs of wear and tear.
- DO NOT put the product at the location where access to the main power is blocked.
- DO NOT use an extension cord or adapter plug.
- DO NOT use the product if it operates incorrectly.
- Make sure the power cord does not touch the hot parts of the product.

Health and Safety Instructions

 **WARNING: BURN HAZARD - DO NOT touch the well access surface of the unit at high temperature**

To avoid possible health and safety concerns, follow these guidelines.

- Wear appropriate protective clothing before using the equipment.
- Operators of this equipment should be adequately trained in the handling of hot and cold items and liquids.
- Do not use the apparatus for jobs other than those for which it was designed, that is, the calibration of thermometers.
- Do not handle the apparatus when it is hot (or cold), without wearing the appropriate protective clothing and having the necessary training.
- Do not drill, modify or otherwise change the shape of the apparatus.
- Do not use the apparatus outside its recommended temperature range.
- After use, do not return the apparatus to its carrying case until the unit has cooled down.
- There are no user serviceable parts inside. When required, contact Tempsens agent for repair.
- Ensure all materials, especially flammable materials are kept away from the hot parts of the apparatus, to prevent fire risk.
- Do not use the product around explosive gas, vapor, or in damp or wet environments.
- Make sure that the space around the product meets minimum space requirements.
- DO NOT turn off the unit at temperatures higher than 250°C. This could create a hazardous situation. Select a set-point less than 100°C and allow the unit to cool before turning it off.
- The top sheet metal of the furnace may exhibit extreme temperatures for areas close to the well access.
- Materials used in this furnace may be irritating to skin, eyes, and respiratory tract. Consult the material manufacturer's Material Safety Data Sheet (MSDS) to learn about those materials before using.






Cautions and Preventions

To avoid possible damage to the instrument, follow these guidelines:

- Before working inside the equipment, turn the power off and disconnect the power cord.
- DO NOT turn the unit upside down with the inserts in place; the inserts will fall out of the unit.
- Use of this instrument at HIGH TEMPERATURES for extended periods of time requires caution.
- Completely unattended high temperature operation is not recommended for safety reasons.
- DO NOT plug the unit into 230 V if the heater switches and fuse holder reads 115 V. This action will cause the fuses to blow and may damage the instrument.
- Components and heater lifetime can be shortened by continuous high temperature operation.
- DO NOT use fluids to clean out the well.
- Never introduce foreign material into the probe hole of the insert. Fluids and other materials can leak into the calibrator causing damage.
- DO NOT drop or force the probe stems into the well. This type of action can cause a shock to the sensor and affect the calibration.

Document Conventions

The documentation uses the following conventions.

 Note:	Configuration notes
 Tip:	Recommendations or suggestions
 Important:	Information regarding required or default configuration settings and product limitations
 WARNING:	Critical actions and configuration options
 WARNING:	

Chapter 1

Introduction

1.1 About CALsys -15/110 Autocal

CALsys -15/110 Autocal has been designed to provide stable and accurate temperature to enable professionals to calibrate temperature sensing devices by comparison method. It is designed to be rugged and easily maintained. This model provides an isothermal enclosure (aluminum block) in which the thermocouple/RTD can be calibrated against the temperature of the calibrator.

For traceable calibration, a master calibration sensor should be placed into the aluminum block alongside the unit under calibration. This method is widely accepted because the calibrator provides very stable temperature nearing to its controlled point, that is, the Master Thermocouple/RTD. The controlled point is calibrated by independent laboratory in compliance to the national standards, and compares the sensor under calibration.

The CALsys models are part of wide range of portable calibrators designed and made by Tempsens.

Contact Tempsens to learn more about other products by Tempsens.




Front View



Back View

1.2 Basic Working Model of CALsys -15/110 Autocal

The calibrator controller uses a precision RTD as a controlling sensor and controls the well temperature with thermoelectric cooler. To obtain and maintain a required temperature the controller varies the power to the Peltier Cell via solid-state relay. There is one electricity driven fan which is situated under the heating chamber for cooling the heater. The CALsys -15/110 Autocal was designed for portability, moderate cost and ease of operation. With proper use the instrument should provide continued accurate calibration of temperature sensors and devices. The user should be familiar with the safety guidelines and operating procedures of the calibrator as described in the User's Manual.


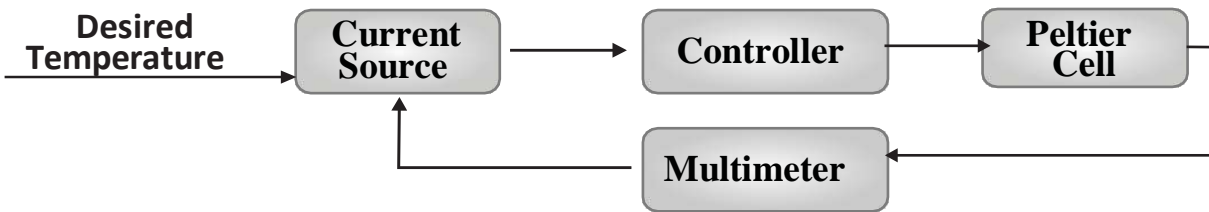


The calibrator controller uses a precision PT-100 as a controlling sensor and controls the well temperature with thermoelectric cooler. The CALsys -15/110 Autocal was designed for portability, moderate cost and ease of operation. With proper use, the instrument should provide continued accurate calibration of temperature sensors and devices.

! Important:

Before using the equipment, read the safety guidelines and operating procedures of the calibrator as described in the of this user manual.


The basic working model for CALsys -15/110 Autocal is as follows:

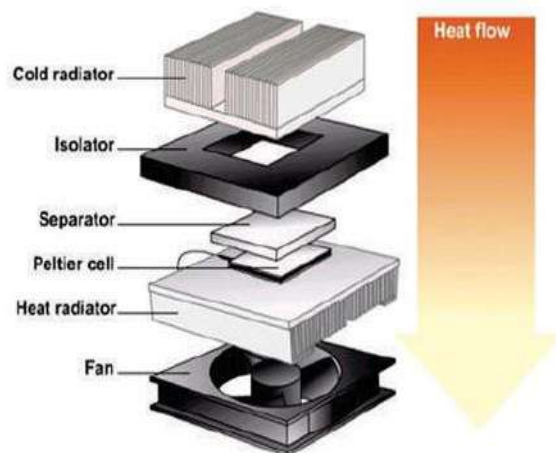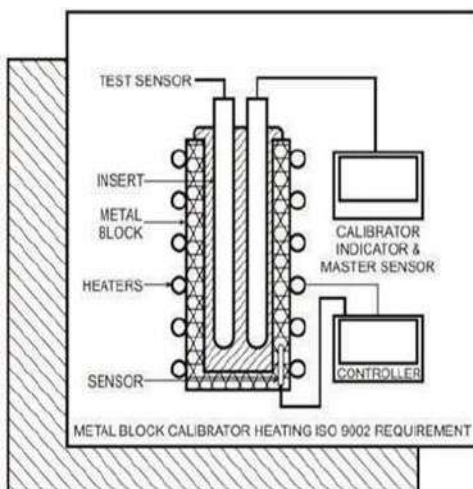

1.3 Physical Measurement

CALsys -15/110 Autocal has the following physical measurements:

- Height: 383 mm
- Width: 230 mm
- Depth: 304 mm

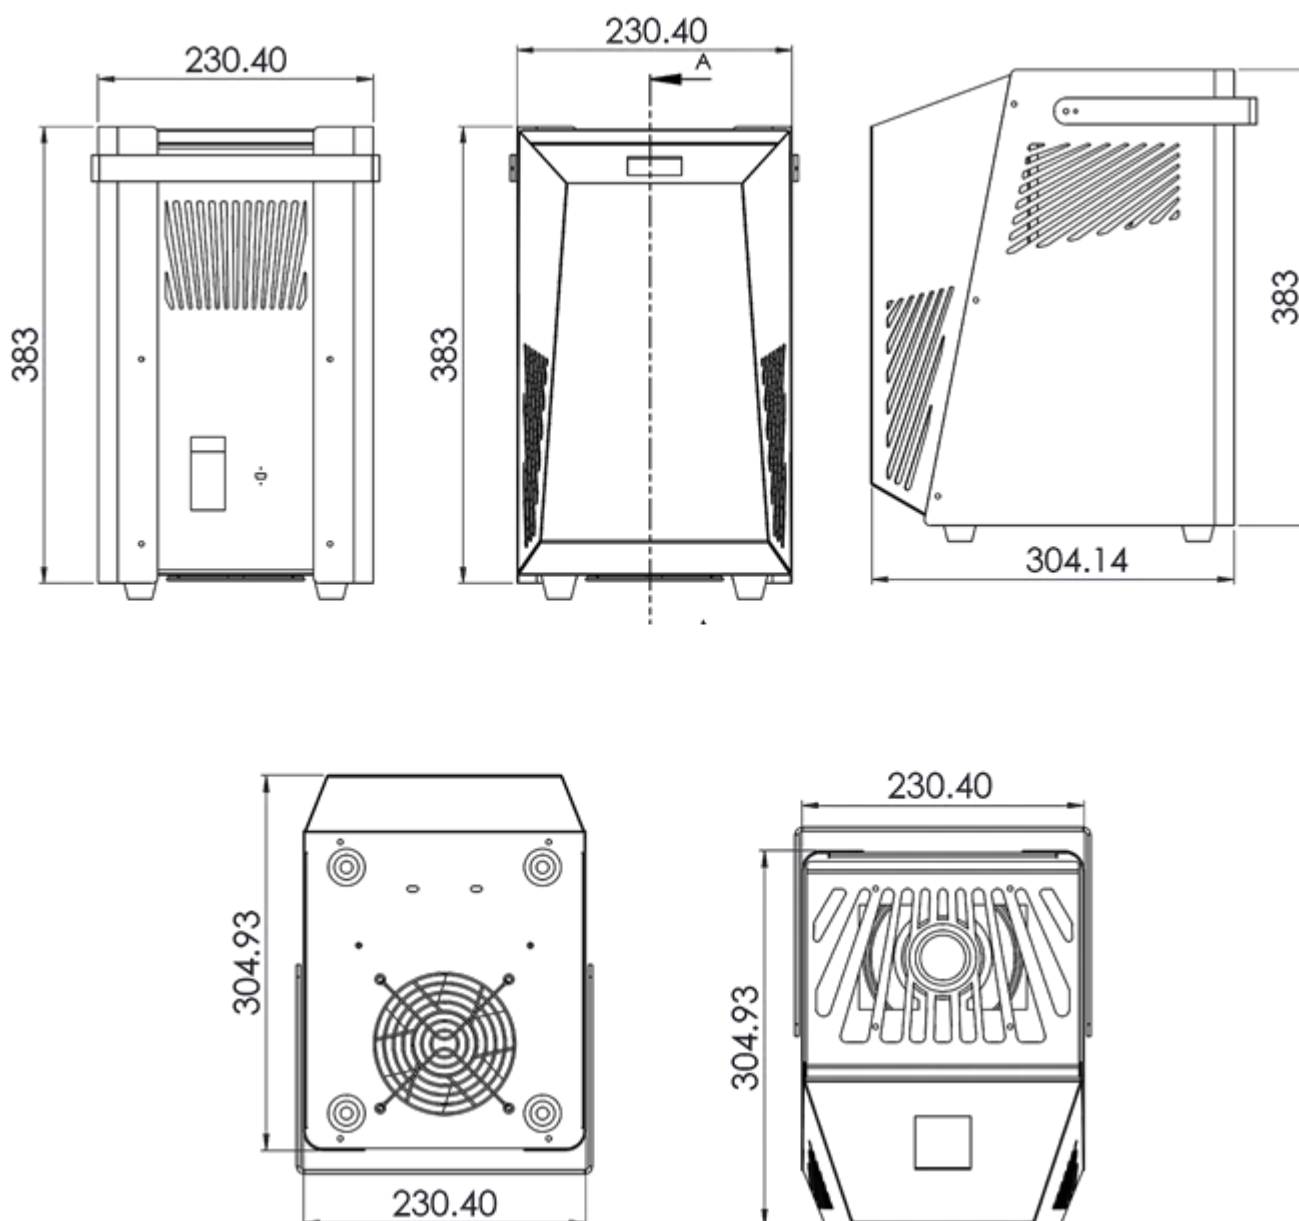

1.4 Technical Specification

CALsys -15/110 Autocal has the following technical specifications:

PARAMETER	SPECIFICATION
Temperature Range	-15°C to 110°C
Resolution	0.1°C
Stability	± 0.03°C at -15°C ± 0.05°C at 0°C ± 0.07°C at 110°C
Radial Uniformity	± 0.05°C at -15°C ± 0.07°C at 0°C ± 0.09°C at 110°C
Insert OD dimensions	24 mm
Immersion depth	120 mm
Heating time	10 Minutes
Cooling time	25 Minute (110°C to -15°C)
Method of control	Self tuned PID controller
Display	LCD, °C or °.F user-selectable
Size (HxWxD)	425(H) x 230(W) x 305(D) mm
Weight	12 kg
Power requirements	230 VAC, 500 W (50 Hz)
Computer interface	LAN/USB
Calibration	Accredited calibration certificate provided(Optional)
Environmental operating conditions	5°C to 25 °C, 0% to 90% RH (non-condensing)
Specifications valid in environmental conditions	5°C.....25°C
Input {CALsys -15/110 Autocal}	Four channels (one master and three test sensors) .high quality universal LEMO connector suitable both for T/C (J, K, N, T,R,S,B type) and Rtd
Software CALsys -15/110 Autocal)	The calibrator will be provided with software for data recording (Manual Mode) and Test Certificate generation in Auto Mode
Data logging (CALsys -15/110 Autocal)	Data logging facility with logged data export to computer through LAN port (optional USB)

Chapter 2

Setting up CALsys -15/110 Autocal

2.1 Installation

Place the dry block on a flat surface with at least 10 inches of free space around the instrument. Overhead clearance is required.

DO NOT Place this unit under a cabinet or structure. Plug the power cord into a grounded mains outlet located on the controlling unit rear panel. Observe that the nominal voltage corresponds to that indicated in the technical specifications in [Technical Specifications](#) in [Chapter 1](#) of this user's guide.

2.2 Optimal Environmental Conditions

Although the instrument has been designed for optimum durability and trouble-free operation, it must be handled with care. The instrument should not be operated in an excessively dusty or dirty environment. Refer to [Chapter 7, Service & Maintenance](#) in this user's manual for routine service and cleaning recommendations.

The instrument operates safely under the following conditions:

- Temperature range: 5 - 50°C (41 - 122°F)
- Ambient relative humidity: 15 - 50%
- Pressure: 75kPa - 106kPa
- Main voltage supply within $\pm 10\%$ of nominal voltage range
- Vibrations in the calibration environment should be minimized
- Altitude less than 2000 meters

2.3 Unpacking and Initial Inspection

CALsys -15/110 Autocal is packed in custom-designed packaging to send out your unit. Unpack the furnace carefully. Inspect the unit after unpacking for any signs of damage, and confirm that your delivery is in accordance with the packing note. If you find any damage to the unit or an item is missing, notify Tempsens immediately.

The following accessories are included in the package:

- CALsys -15/110 Autocal
- Power cord
- External Reference Sensor
- Block
- Tool for Insert
- Manual
- Certificates
- Ceramic Wool
- Lemo Connector 4 nos.




CALsys -15/110 Autocal



External Reference Sensor



Block

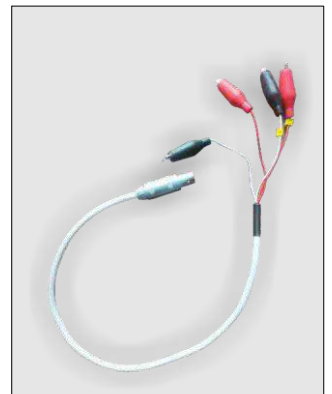

Lemo Connector Cable



LAN cable



Insulation Wool



Tool for Insert



Power cable

2.4 Operating Instructions

1. Open the carrying case carefully and take out the operating manual from the box and read carefully.
 2. Take out the Temperature Calibrator unit carefully and keep it at suitable place.
 3. Connect the power cable to the rear power entry and the power plug to the main power outlet.
 4. Turn the switch on, and observe the display on the controller. The display shows that the bath is ready for use.
 5. Keep the switch in the ON position.
 6. Ensure the metal INSERT is properly inserted in the Calibration box.
 7. Keep the fan in ON position.
 8. If the fan is running and temperature of the furnace is rising, the Calibration box is in healthy condition.
-



Note:

- The unit must be correctly connected to the electricity supply.
 - The unit must be correctly grounded. ⚡
 - The unit's ON/OFF switch is located on the power inlet. DO NOT switch OFF the unit when it is hot. Keep the unit running until cooled.
-

2.5 Initial Testing

This unit is fully tested before dispatching. However, verify its operation as follows:

1. After connecting the CALsys -15/110 Autocal to the electricity supply, the temperature controller display should show the temperature of the chamber, and the last set-point value. The fan on the bottom should be heard running.
2. Change the set-point to 250°C and observe that the block temperature rises and settles to this value.
3. If the unit performs as expected, the unit can now be used for calibration.


If any problems or faults arise during the test, contact Tempsens immediately for help and advice.

Chapter 3


Operating CALsys -15/110 Autocal

3.1 Turning On the unit

1. Before plugging the unit to main power outlet, ensure that the voltage, frequency and current from the main power outlet are within the recommended ranges (typically: 230 VAC \pm 10, 50/60 Hz).
2. Plug the back main power cord into main outlet.
3. Turn the controller on using the switch located on the back section, and set the temperature value in the controller. The Calibrator will turn on and begin to heat the previously programmed temperature set-point.

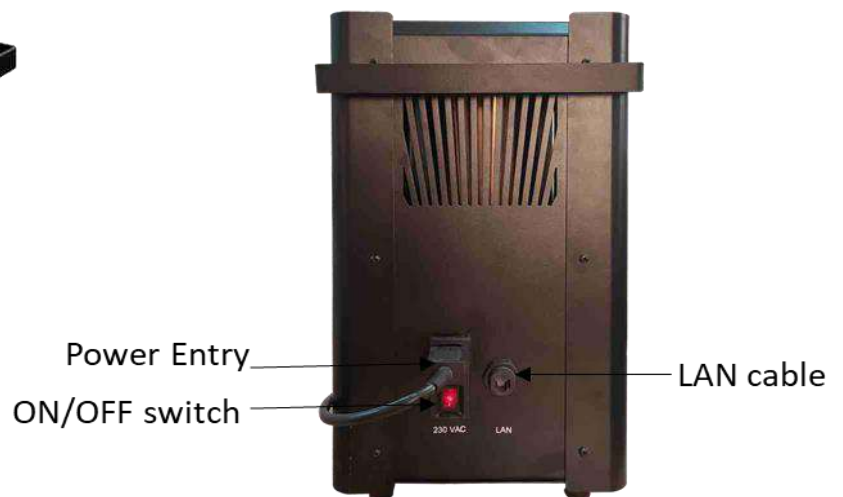

Sensor Connection for CALsys -15/110 Autocal: The Calibration system provides calibration up to four channels i.e. one master and three test sensors - We use high quality universal LEMO connector i.e. suitable both for T/C and Rtd.

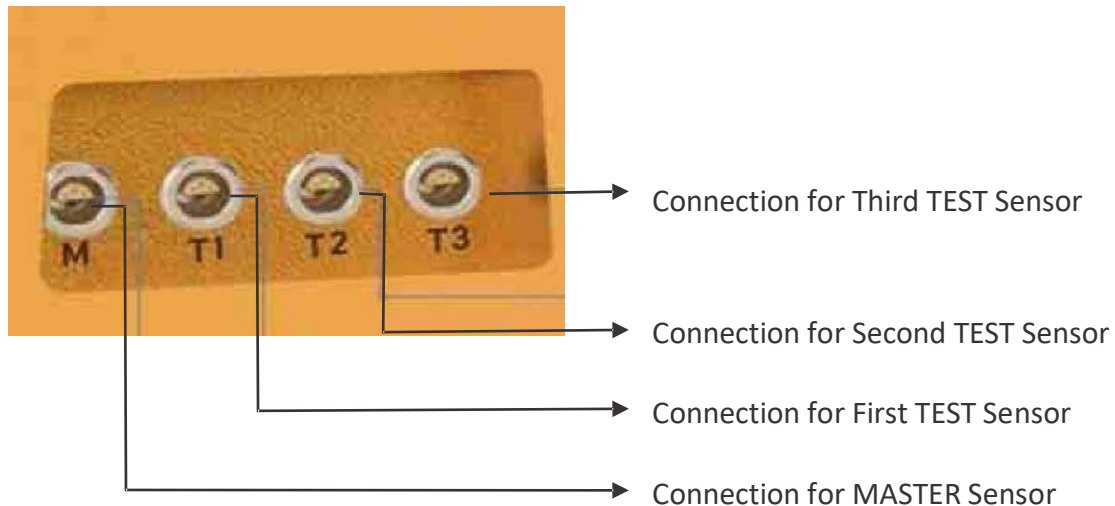

3.2 Heating up the source

Press “UP” or “DOWN” key of controller to change the set-point value. The controller switches the calibrator heater to ON or OFF to raise or lower the temperature. The displayed temperature will gradually change until it reaches the set-point temperature.

The Calibrator may require 15 minutes to reach the set-point depending on the span. The unit takes 15 to 20 minutes more to stabilize the bath temperature within $\pm 0.1^{\circ}\text{C}$ of the set-point



Note:


- All other controller parameters are set to default, and are locked. It is recommended not to change these parameters.

Important:

- When the source is operated at any temperature above ambient temperature, the front face and plate become hot.
- Always put the fan in "ON" condition and do not switch off the main power supply directly. Before tuning the unit off, set the controller to lower temperature, and then wait until the temperature drops below 25°C .

3.3 Operating Instruction

1. Connect the CALsys -15/110 Autocal to a suitable power supply.
2. Place the metal insert in the bath.
3. Place the sensors for calibration and master sensor into a suitable insert hole.
4. Set the controller to the required temperature.
5. If test and master sensor are thermocouple, then always use compensating cable (for each type such as J, K, T, E, N, R, S, B) for interconnection between sensor and Digital Multimeter (DMM).
6. Keep reference junction at 0°C. If keeping at 0°C is not possible, then add millivolt (mV) of room (ambient) temperature with sensors output (mV) to compensate the ambient temperature.
7. When controller temperature becomes stable, record the reading from DMM with at least 4 1/2 digit precision, which should be calibrated for the measuring range (mV & ohms measurements).
8. Find out the error by comparison method.
9. Reset the controller and/or repeat the calibration for another calibration point or for another sensor.
10. When the calibration is completed, reset the controller to 0°C. Before moving CALsys -15/110 Autocal to new location the unit must be cooled to below 250°C.

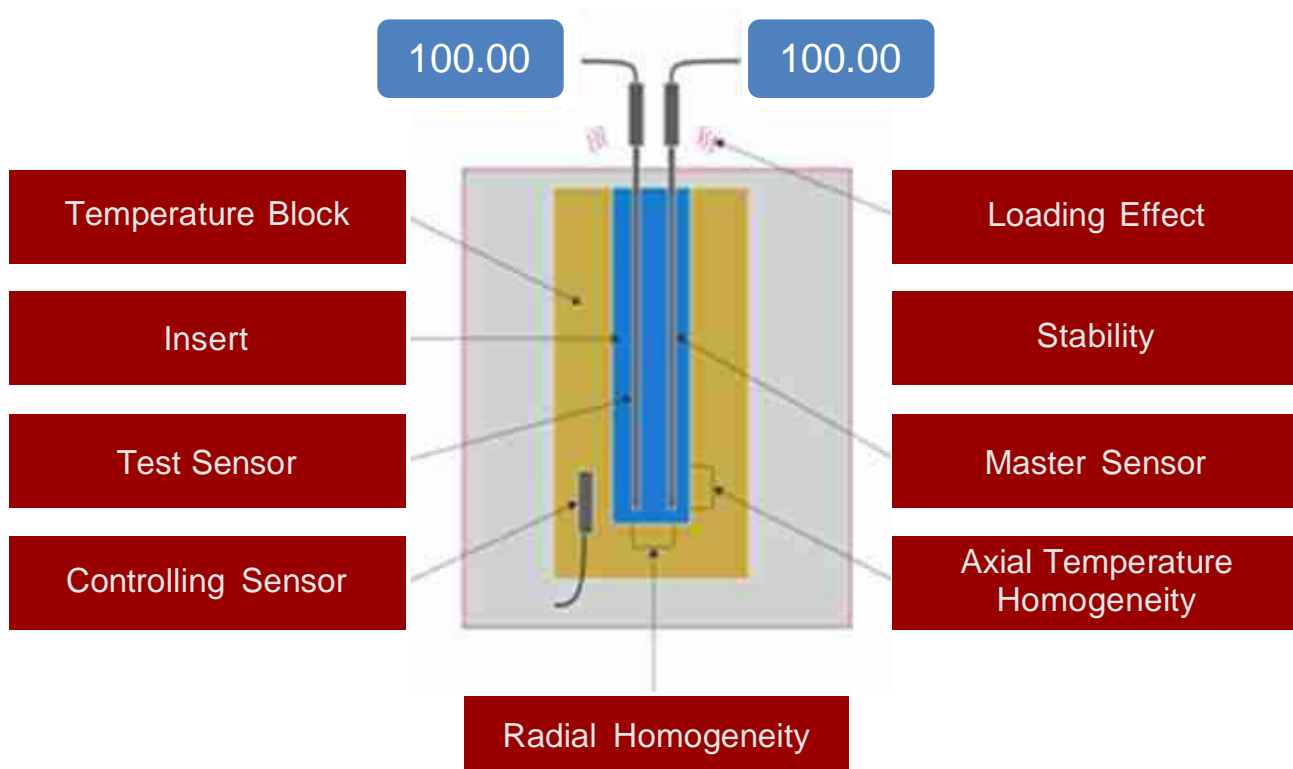

**Note:**

- Metal Insert should be of required hole size so that the hole size is suitable for sensor under calibration.
- Always use a master sensor (master RTD/TC) for comparison calibration method.
- Place the metal insert first in all sensors, and then set the controller at desired set point.
- Check that all sensors (test and master) are immersed at same depth in insert (metal block).
- If sensors are not immersed at same depth than there will be an error in temperature reading.
- Always use a metal block calibrator (insert). Metal block calibrator heat transfer characteristics should match with those in the normal measuring situations.
- The temperature sensors should be long enough to immerse completely in the calibration bath. Errors due to stem conduction can be ignored.
- Do not change the set temperature value too often. For example, you set the temperate initially at 100°C, and when it reaches at 80°C, you change the temperature to 30°C. Or, you set the temperature initially at -10°C, and when it reaches close to -5°C, you change the temperature to 50°C. Doing so may affect unit's performance.
- Plan the calibration point by gradually increasing temperature, then set the controller accordingly. This method will save the time.
- Take the reading of sensors (master and test) at stable temperature with the help of digital multi-meter, or by using Tempsens' TEMPMET 08 or TEMPMET 09 for reading RTD or TC sensor.

3.4 Cooling Down the Source

- Before transporting the metal block, ensure that the temperature of bath has cooled sufficiently.
- If you require metal block to cool quickly, set the temperature to the room temperature (ambient temperature).
- Always cool the heated instrument to ambient temperature before disconnecting it from the mains, switching it OFF, or removing the temperature sensor or test item.
- Always keep the heated instrument supervised and under observation until it cools down sufficiently.

Chapter 4

Operation of HMI

4.1 CALSYS -15/110 AUTOCAL

For calibration of devices in the process industries CALsys -15/110 Autocal is a powerful tool.

Working:

CALsys -15/110 Autocal is an automatic temperature calibration system. The Software provides Auto Calibration and have two operating modes i.e. Manual and Auto mode.

1. Select the mode (Manual or Auto) for calibration.

4.2 In Manual Mode:

(Process is taken at single calibration point)

- a. Define the type of Thermocouple or RTD, calibration point and type of unit (°C/F/K).
- b. System will take the calibration bath to predefined calibration temperature point.
- c. System waits for the furnace/bath to be stabilized and then takes reading of master and test sensors. Standard deviation is analyzed to see that the reading are stable, then stored.

4.3 In Auto Mode

(Process is taken at five calibration point)

- a. Define the Serial Number, type of Thermocouple or RTD, temperature unit, calibration points.
- b. System will take the calibration bath to predefined calibration temperature points.
- c. System waits for the furnace/bath to be stabilized and then take reading of master sensor and test sensors. Standard deviation is analyzed to see that the reading are stable, then stored.
- d. The system takes the furnace to the next temperature point.

Step c is repeated until all points are completed.

The system provides calibration up to four channels i.e. one master and three test sensors (Thermocouple/RTD).

Report Generation:

1. All the information i.e. Serial Number, type of Sensor (Thermocouple/RTD), Cold Junction Compensation (Thermocouple) or 2-,3-,4- wire (RTD), temperature unit, calibration temperature points and respective sensors temperature are stored in a file.
2. The file is transfer to PC to generate report.


4.4 User Interface of CALsys -15/110 Autocal:

1. Splash Screen: This screen appears on the start of system.




2. **Home Screen:** In this screen user can select sensor configuration (for selection of type of sensors), mode of operation (auto / manual) and data transfer (file transfer).



This window also shows the ongoing process.

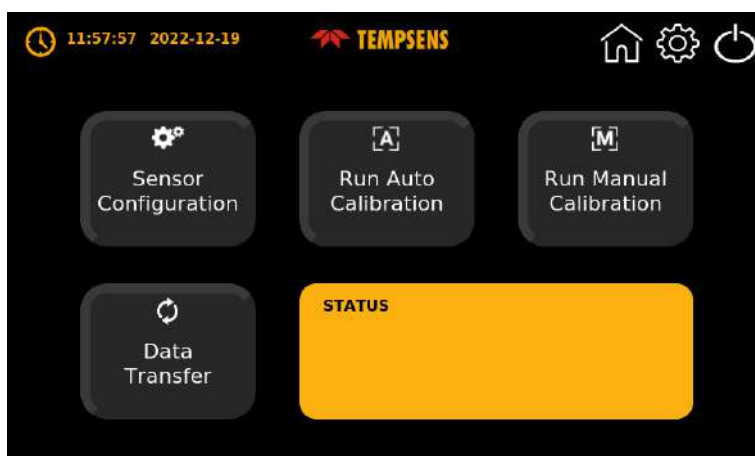



3. Setting configuration:

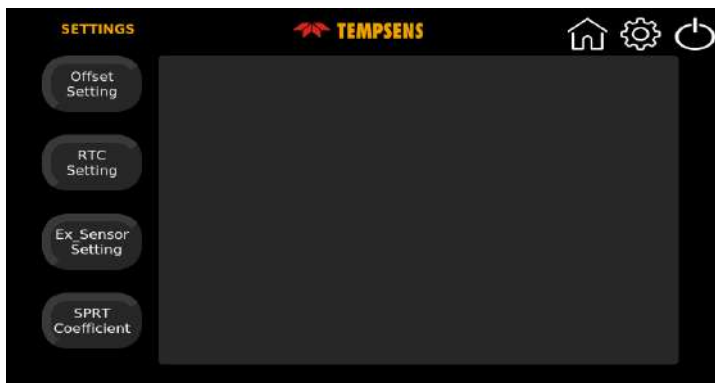



A. Offset setting:

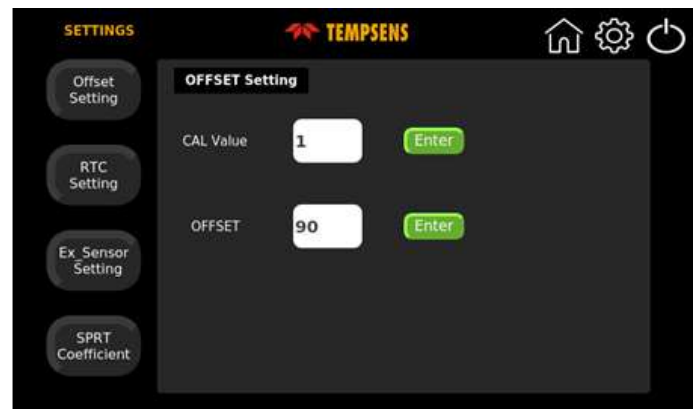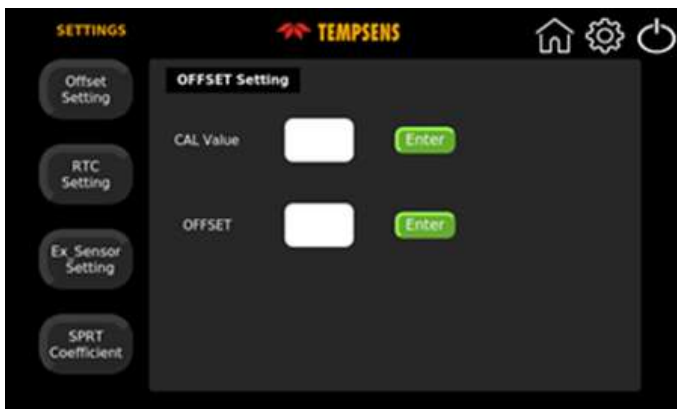


B. RTC setting:

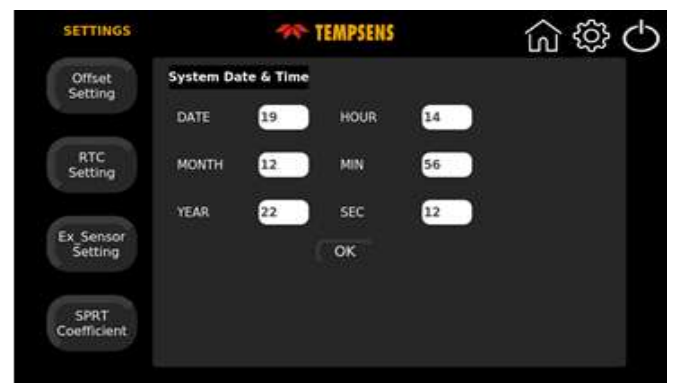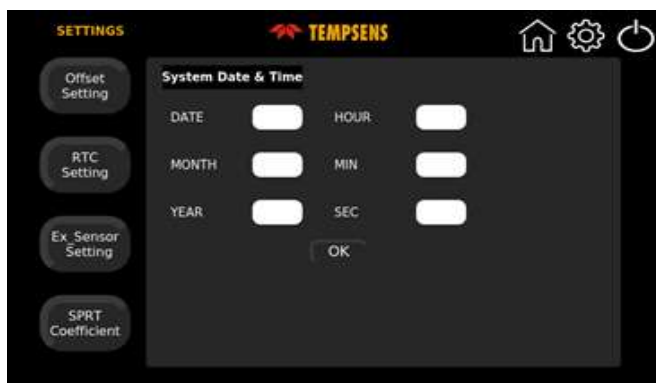

C. Ex_sensor setting:

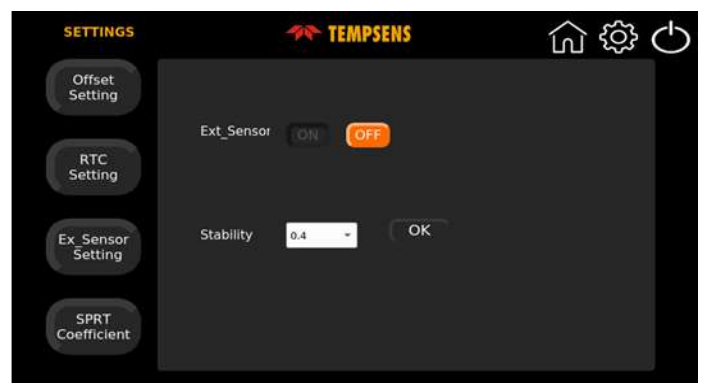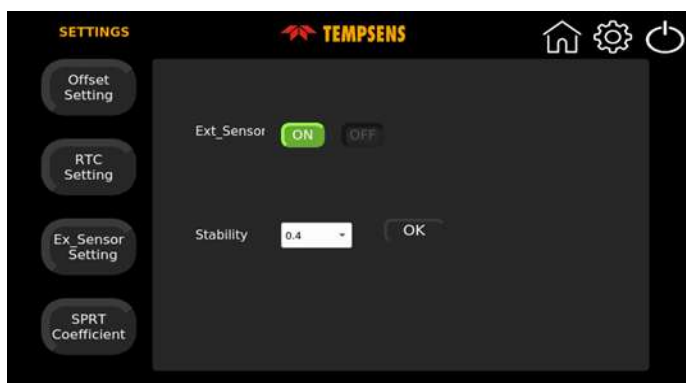

D. SPRT coefficient:

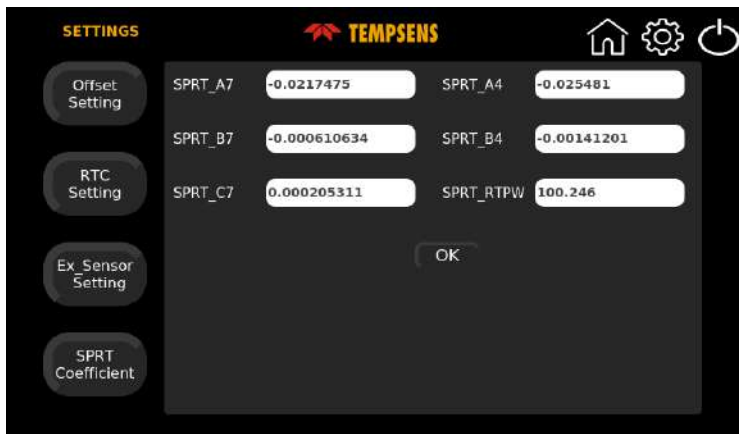

SETTINGS

Offset Setting

SPRT_A7: -0.0217475 SPRT_A4: -0.025481

RTC Setting

SPRT_B7: -0.000610634 SPRT_B4: -0.00141201


Ex_Sensor Setting

SPRT_C7: 0.000205311 SPRT_RTPW: 100.246

SPRT Coefficient

OK

4. Sensor Configuration: In this screen user select the sensors (TC / RTD) for calibration with their serial number and temperature unit (C/F/K).

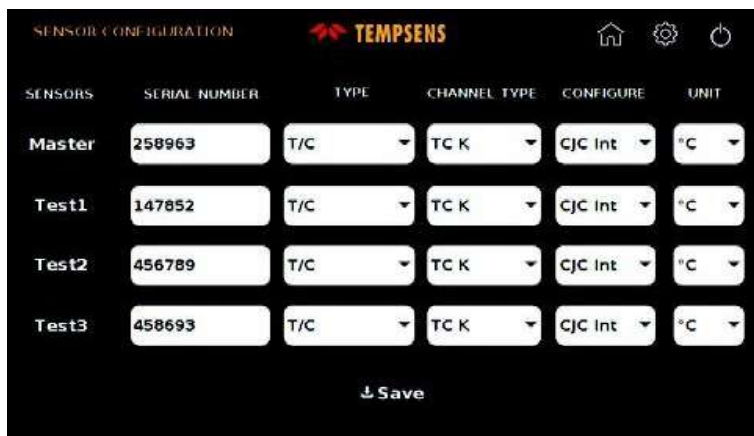


SENSOR CONFIGURATION

SENSORS	SERIAL NUMBER	TYPE	CHANNEL TYPE	CONFIGURE	UNIT
Master	258963	T/C	TC K	CJC Int	°C
Test1	147852	T/C	TC K	CJC Int	°C
Test2	456789	T/C	TC K	CJC Int	°C
Test3	458693	T/C	TC K	CJC Int	°C

Save

5. Manual Mode: In this screen user set the temp. Point for calibration and on clicking start process button the process of calibration starts.

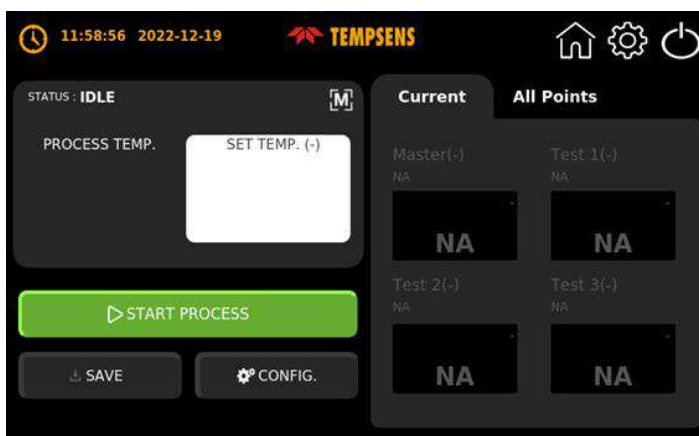

Manual Mode - IDLE

STATUS: IDLE

PROCESS TEMP. SET TEMP. (-)

START PROCESS

SAVE CONFIG.


Current **All Points**

Master(-) Test 1(-)

NA NA

Test 2(-) Test 3(-)

NA NA



Manual Mode - RUNNING

STATUS: RUNNING

PROCESS TEMP. SET TEMP. (°C)

300.0 °C 300.0

STOP PROCESS

SAVE CONFIG.

Current **All Points**

Master(°C) Test 1(°C)

RTD SPRT 4W T/C N CJC Int

212.407Ω 9.347 mV

300.23 300.14

Test 2(°C) Test 3(°C)

T/C K CJC Int RTD SPRT 4W

12.223 mV 212.203Ω


300.37 299.66

6. Auto Mode: In this screen user sets the temp. Points for calibration.



In auto mode calibration when all set points are completed status, then touch save button for save the data it turns into green as per shown in image.

Data Transfer: For data transfer Come on home screen. In this screen the files are transferred to pc for report generation.

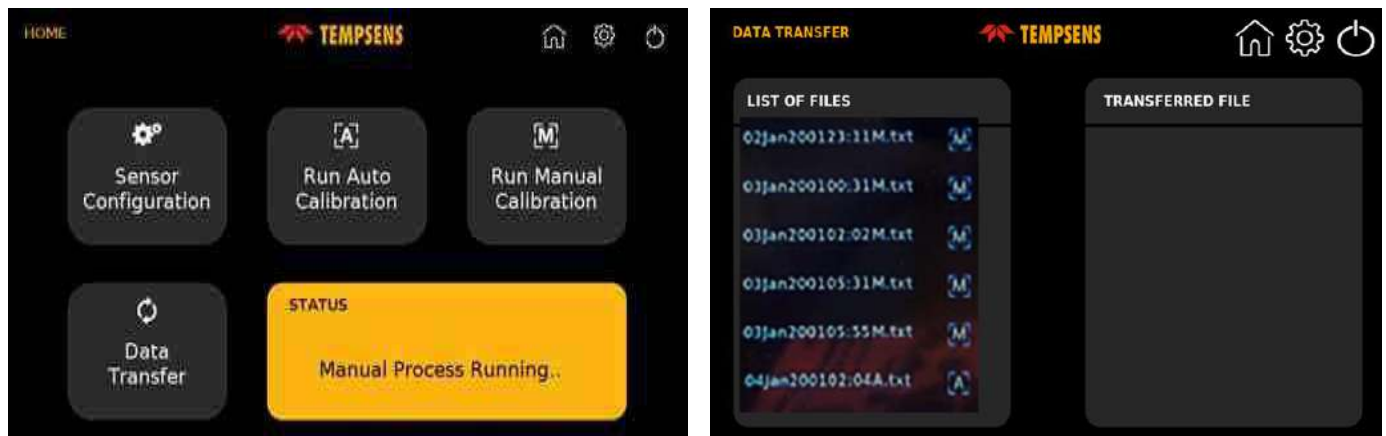

The provided Tempsens software offers possibilities to connect furnace temperature bath and change set point, maximum time span, evaluate measuring data.

Chapter 5

Digital Communication

Digital Communication allows the controller to communicate with a PC or a networked computer system through LAN protocol. A local area network (LAN) consists of a series of computers linked together to form a network in a circumscribed location. The computers in a LAN connect to each other via TCP/IP Ethernet or Wi-Fi Digital Communications



Chapter 6

Software Installation


The provided Tempsens software offers possibilities to connect furnace temperature bath and change set point, maximum time span, evaluate measuring data.

Keep follow the below instruction for communication and interface between PC to furnace-
Control Panel Network & Internet Network and Sharing centre Change Adaptor setting Local Area Connection Select properties Internet protocol version 4 Use the following IP setting
IP Address: 192: 168: 1: 60
Subnet Mask: 255:255:255:0


Open control panel window



Select network and internet

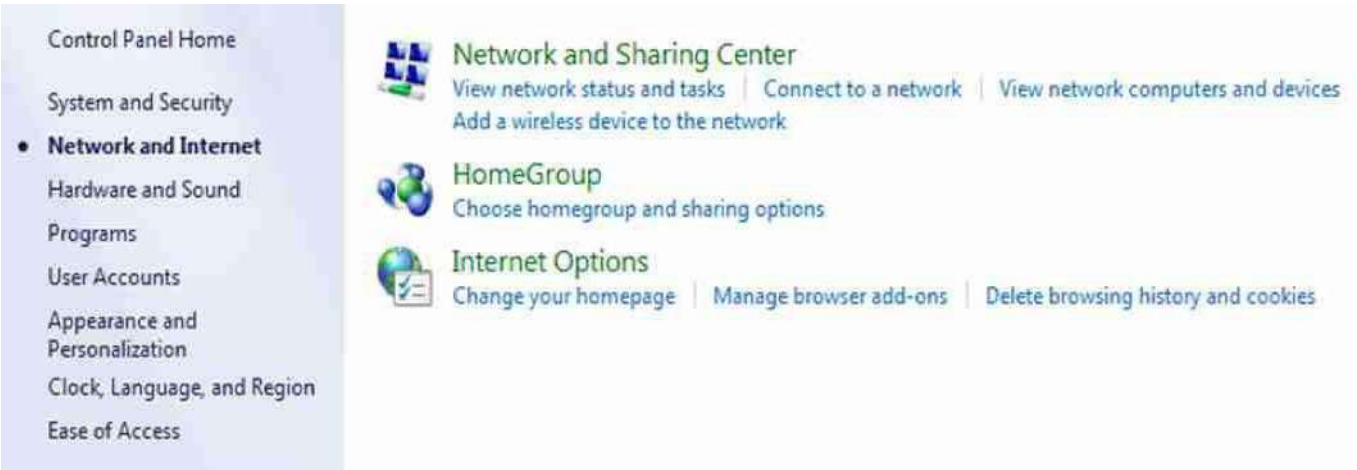


Then select change adaptor setting

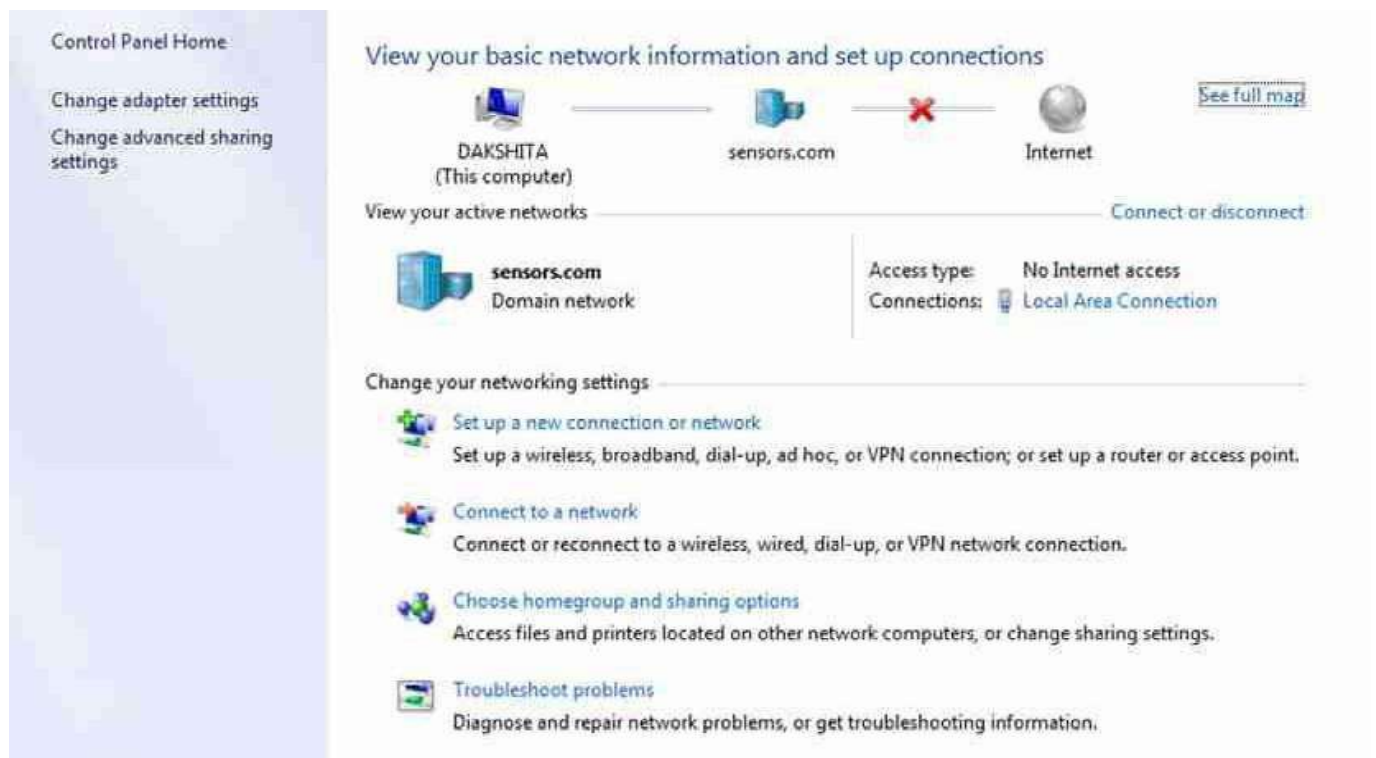

Then select local area connection and then properties


Then tick internet protocol version 4 and press Ok

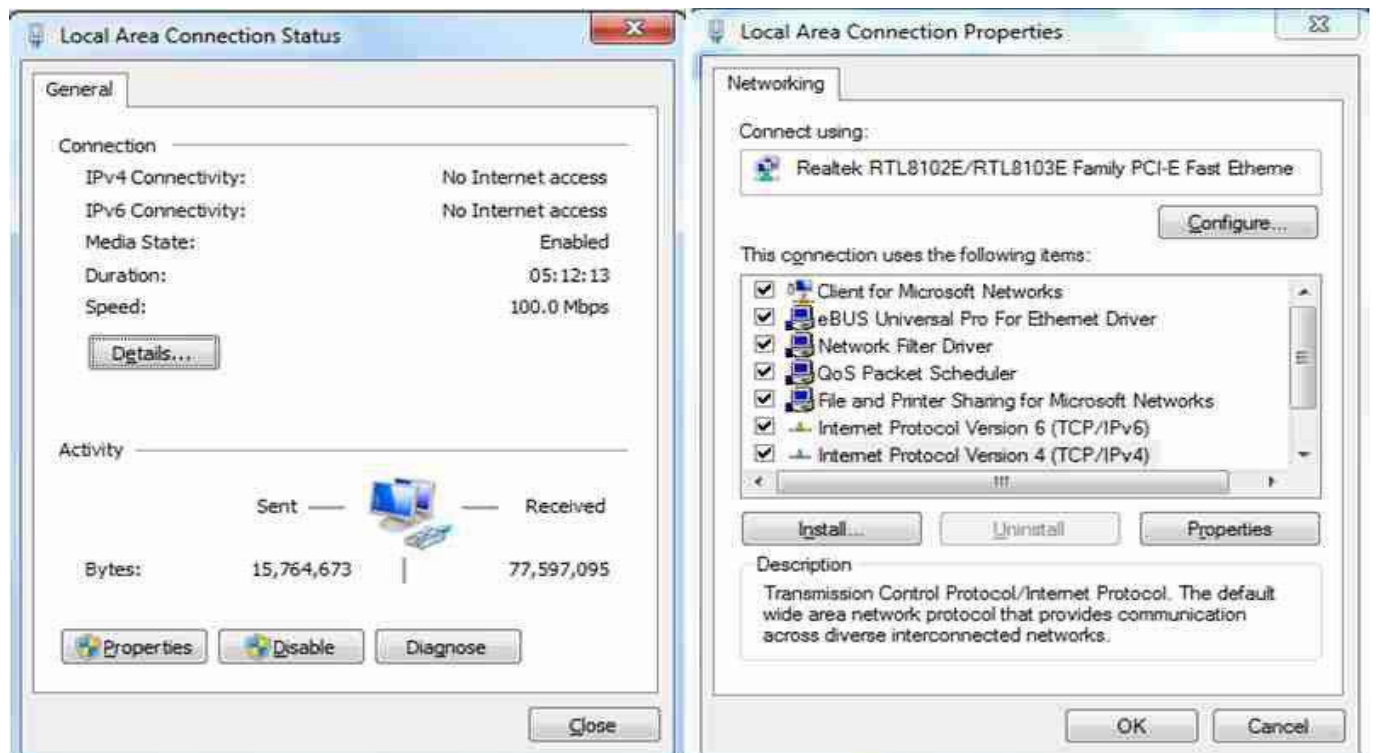

Then last change IP address as per said


IP Address: 192: 168: 1: 60

Subnet Mask: 255:255:255:0

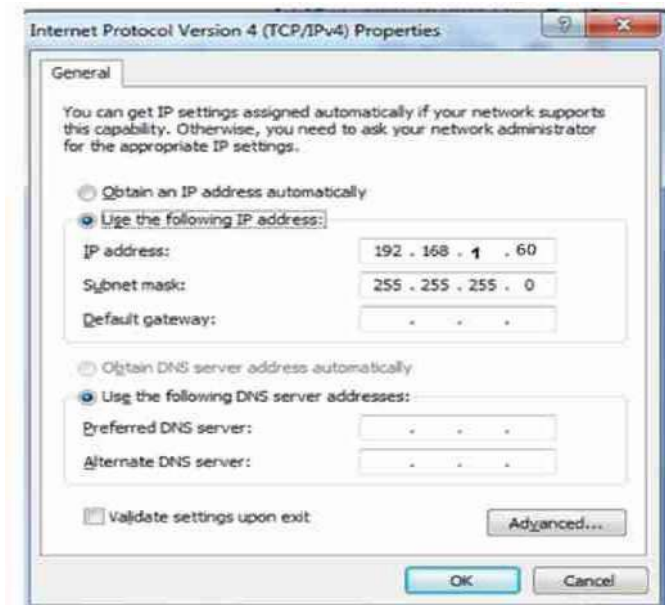

6.1 Installation


Install the calibration software using the installation guide file on CD ROM. After installation of the software; Double click the application. It will open the screen of software.

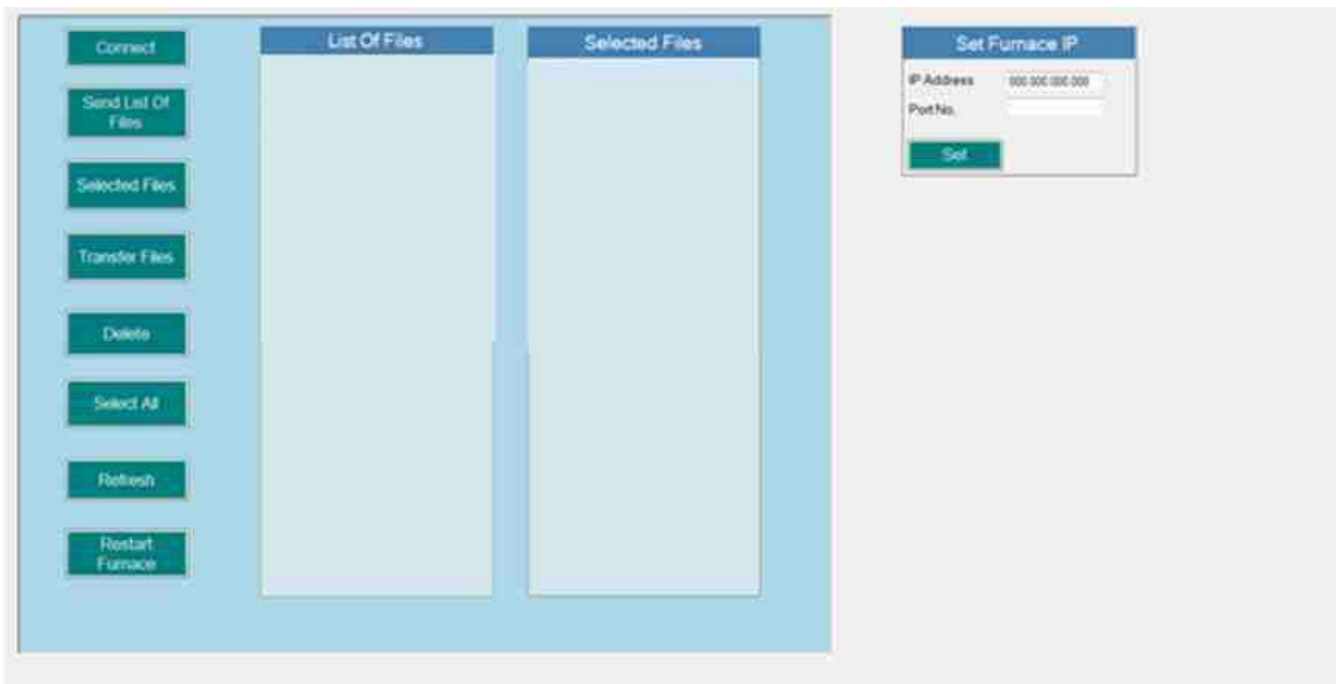

After open autocal software the above image shown on desktop screen

Click on Connect icon for fetch data it will show connection successfully.

Then select send list of files After this the window will show files, fetching from calibrator as shown in below image.

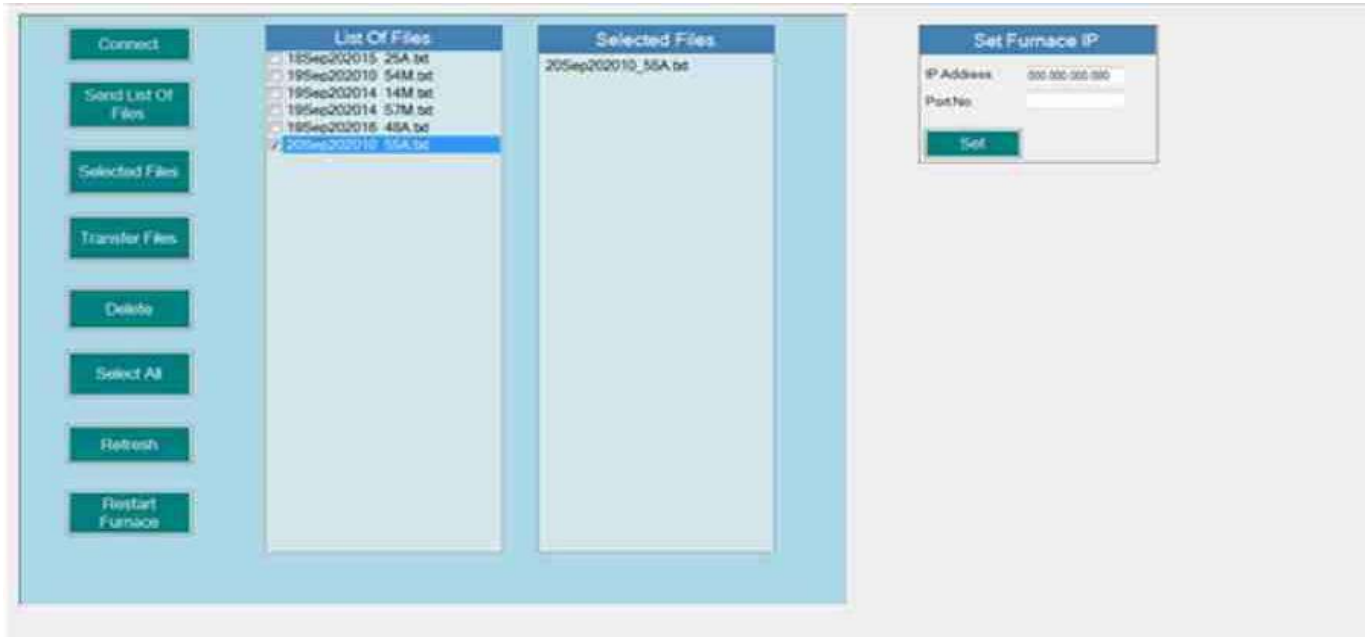

7. Select anyone file and click on select files icon then it will show file selected successfully.
8. Then click on Transfer file icon, file will transfer automatically at your selected place. Then it will show transfer successfully then the whole process will complete. The file name AUTOCAL will save automatically in E or D computer drive.

Chapter 7

Service & Maintenance

7.1 Routine Service

Turn the electricity supply off before attempting any cleaning operation. The only moving part in this unit is fan, which is sealed for life.

Depending on the environment in which **CALsys -15/110 Autocal** is used, periodic cleaning is recommended. Cleaning may be accomplished by the use of a small dry paint brush. The instrument should be periodically checked to ensure it is in good order both mechanically and electrically.

7.2 Replace the Controlling Sensor

Use the following steps to replace the controlling RTD sensor in the Calibrator Unit:

1. Disconnect the Calibrator Unit from electrical supply.
2. Remove the cover of the Calibrator Unit.
3. Disconnect the RTD from the connector block.
4. Remove the RTD from the heating chamber present inside by unscrewing the fitting.
5. Insert and fit the new RTD into the heating chamber.
6. Reconnect the new RTD to the connector block.
7. Place the cover back on the Calibrator Unit.
8. Reconnect the furnace to the electrical supply.

7.3 Replace Solid State Relay

Use the following steps to replace the solid state relay in the Calibrator Unit:

1. Disconnect the Calibrator Unit from the electrical supply.
2. Remove the cover of the furnace.
3. Locate the solid state relay.
4. Note down the wire positions and then disconnect the wires.
5. Remove the faulty relay and replace it with a new one.
6. Tighten the fixing screws.
7. Refit the wires back in position as you noted in step 4 of this procedure.
8. Place the cover back on the Calibrator Unit.
9. Reconnect the furnace to the electrical supply.

Chapter 8

Troubleshooting CALsys -15/110 Autocal

8.1 CALsys -15/110 Autocal unit does not turn on

If the CALsys -15/110 Autocal unit does not turn on or operate as usual, check if the fuse is broken, and replace the fuse if necessary. If the fuse breaks repeatedly, contact Tempsens for technical support.

8.2 The CALsys -15/110 Autocal unit is not stable

If the CALsys -15/110 Autocal is not stable or the temperature varies too often, the control parameters might have been modified. If this happens, contact Tempsens for technical support.

8.3 The temperature of the calibrator does not rise

If the temperature of the Calibrator Unit does not rise, ensure the following:

1. The power cord is tightly fitted at the power entry location on the Calibrator Unit.
2. The power switch is turned ON.

If the temperature of the Calibrator Unit still does not rise even after you have inspecting and fitting the power cord and power switch, the reason can be one of the following:

- The heating element is not firmly closed. If the heating element is open, close it properly.
- The thermocouple is not firmly closed. If the thermocouple is open, close it properly.
- The Controller Unit may be not display correct reading.
- The SSR is damaged.

If the Calibrator Unit does not function properly, contact Tempsens immediately for technical support.

Appendix A: Calibration Services

Tempsens Calibration Center is an independent unit of Tempsens instruments (I) Pvt. Ltd, having laboratories at Udaipur, Vadodara & Bangalore. It is accredited for wide range of temperature calibration services.

It is the only private sector Laboratory in the country with accredited Fixed Point Temperature Calibration Facilities. The lab has highly stable calibration furnaces, measuring instruments and accurate master sensors traceable to National and International Standards.

The calibration center functions as per ISO 17025 / NABL standards. Calibration of contact type sensors can be made in temperature range of -196°C to 1600°C and Calibration of non-contact type sensors can be made in temperature range 0°C to 2900°C. Further the laboratory is accredited for onsite temperature calibration.

The lab offers both at Lab & On-Site Calibration of Furnace/Bath from -80°C to 1600°C and Black Body Calibration from 50°C to 1700°C.

Furnace/Chamber Calibration (TUS) with multiple sensors from -80°C to 1200°C is also in the scope of the lab.

In House Calibration Facility

QUALITY MEASURED / INSTRUMENTS	TEMPERATURE RANGE	CALIBRATION & MEASUREMENT CAPABILITY
Contact Type RTD, Thermocouples Thermometers	-196°C	0.05°C
	-80 to -38°C	0.03°C
	-38°C to 0°C	0.03°C
	>0°C to 140°C	0.04°C
	>140°C to 250°C	0.04°C
	>250°C to 650°C	0.12°C
	>650°C to 1200°C	1.30°C
	>1200°C to 1600°C	2.60°C
Non-Contact Type Pyrometer	0°C to 250°C	1.5°C
	>250°C to 500°C	2.4°C
	>500°C to 1500°C	2.5°C
	>1500°C to 1700°C	3.2°C
	>1700°C to 2900°C	4.0°C

On-site Calibration Facility

QUALITY MEASURED / INSTRUMENTS	TEMPERATURE RANGE	CALIBRATION & MEASUREMENT CAPABILITY
Contact Type RTD, Thermocouples Thermometers	-25°C to 0°C >0°C to 140°C >140°C to 250°C >250°C to 650°C >650°C to 1200°C	0.07°C 0.04°C 0.09°C 0.12°C 1.30°C
Non-Contact Type Pyrometer	0°C to 250°C >250°C to 500°C >500°C to 1200°C	1.50°C 2.40°C 2.5°C
Multipoint Position Calibration of Chamber, Oven, Furnaces (Thermal Mapping(TUS))	-80°C to 200°C >200°C to 1200°C	2.8°C 4.1°C

Fixed-point Calibration Facilities

QUALITY MEASURED / INSTRUMENTS	TEMPERATURE RANGE	CALIBRATION & MEASUREMENT CAPABILITY
Calibration of SPRT/PRTS/thermocouple and so on.	Triple Point of Water (0.01°C) Melting Point of Gallium (29.7646°C) Freezing Point of Tin (231.928°C) Freezing Point of Zinc (419.527°C) Freezing Point of Aluminum (660.323°C)	0.0038°C 0.0065°C 0.0065°C 0.0071°C 0.0075°C
Calibration of Thermocouple at Secondary Fixed Point	Melting Point of Gold (1064.18 °C)>1500°C to 1700°C >1700°C to 2900°C	0.72°C2.5°C 3.2°C 4.0°C
	Melting Point of Palladium(1554.8	0.83°C

Appendix B: Warranty

This instrument has been manufactured to exacting standards and is warranted for twelve months against electrical breakdown or mechanical failure caused through defective material or workmanship, provided the failure is not the result of misuse. In the event of failure covered by this warranty, the instrument must be returned, carriage paid, to the supplier for examination and will be replaced or repaired at our option.

Fragile ceramic and/or glass parts are not covered by this guarantee

Interference with or failure to properly maintain this instrument may invalidate this guarantee

Limit of Liability

TEMPSENS is not liable for any damages that arise from the use of any examples or processes mentioned in these Specifications are subject to change without notice.

Caution in Using the Product

Tempsens products are intended for use by technically trained and competent personnel familiar with good measurement practices.

It is expected that personnel using this equipment will be competent with the management of apparatus which may be powered or under extremes of temperature, and are able to appreciate the hazards which may be associated with, and the precautions to be taken with, such equipment



www.tempsens.com

TEMPSENS INSTRUMENTS (I) PVT. LTD.

Tempsens Instruments (I) Pvt. Ltd. U# II
A-190, Road No.5, M.I.A., Udaipur india

Ph. : +91-294-3500629(D), 3500600, **Fax :** +91-294-2500650

Email : tech@tempsens.com